


Important: This connection schematics and the associated configuration form are just suggestions based on the available to us. Your sensors may be different and they may require different schematics and form. Please refer to the Daqu manual for more details.

Important: Pins labeled as +5V, +12V and GND are OUTPUT pins only.
Never connect any power source to them.
Doing so may cause permanent damage!

Use a separate thick wire for connecting engine block and ground splitter.
Do not connect ground splitter to any other ground inside aeroplane!

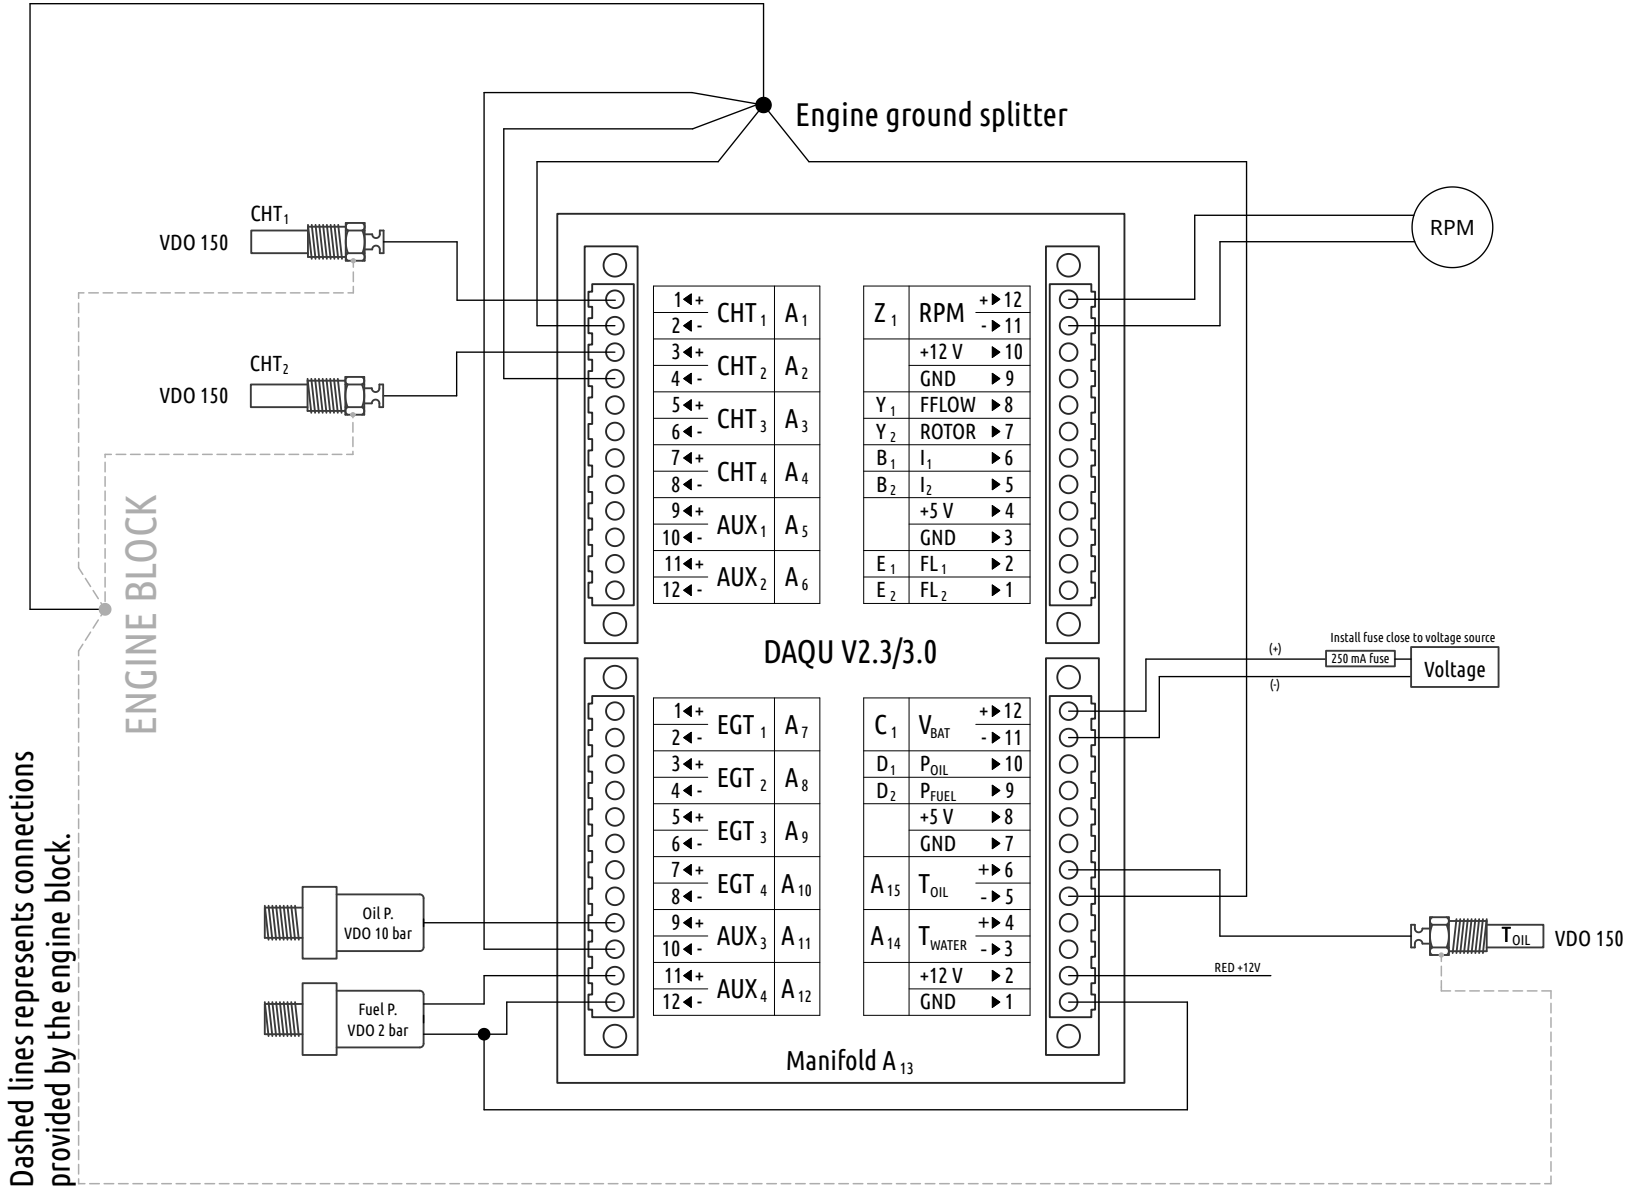

Kanardia d.o.o.
Lopata 24 a
SI-3000 Celje, Slovenia

Date: Sept 2023
Scale: N-A

Revision: 1

Title: Schematics for Rotax 912, passive
Product: Daqu 2.3