


Important: This connection schematics and the associated configuration form are just suggestions based on the data available to us. Your sensors may be different and they may require different schematics and form. Please refer to the Daqu manual for more details.

Important: Pins labeled as +5V, +12V and GND are OUTPUT pins only. Never connect any power source or GND to them. Doing so may permanently damage Daqu! Connecting any power source to GND will destroy Daqu!

Use a separate thick wire for connecting engine block and ground splitter.
Do not connect ground splitter to any other ground inside aeroplane!

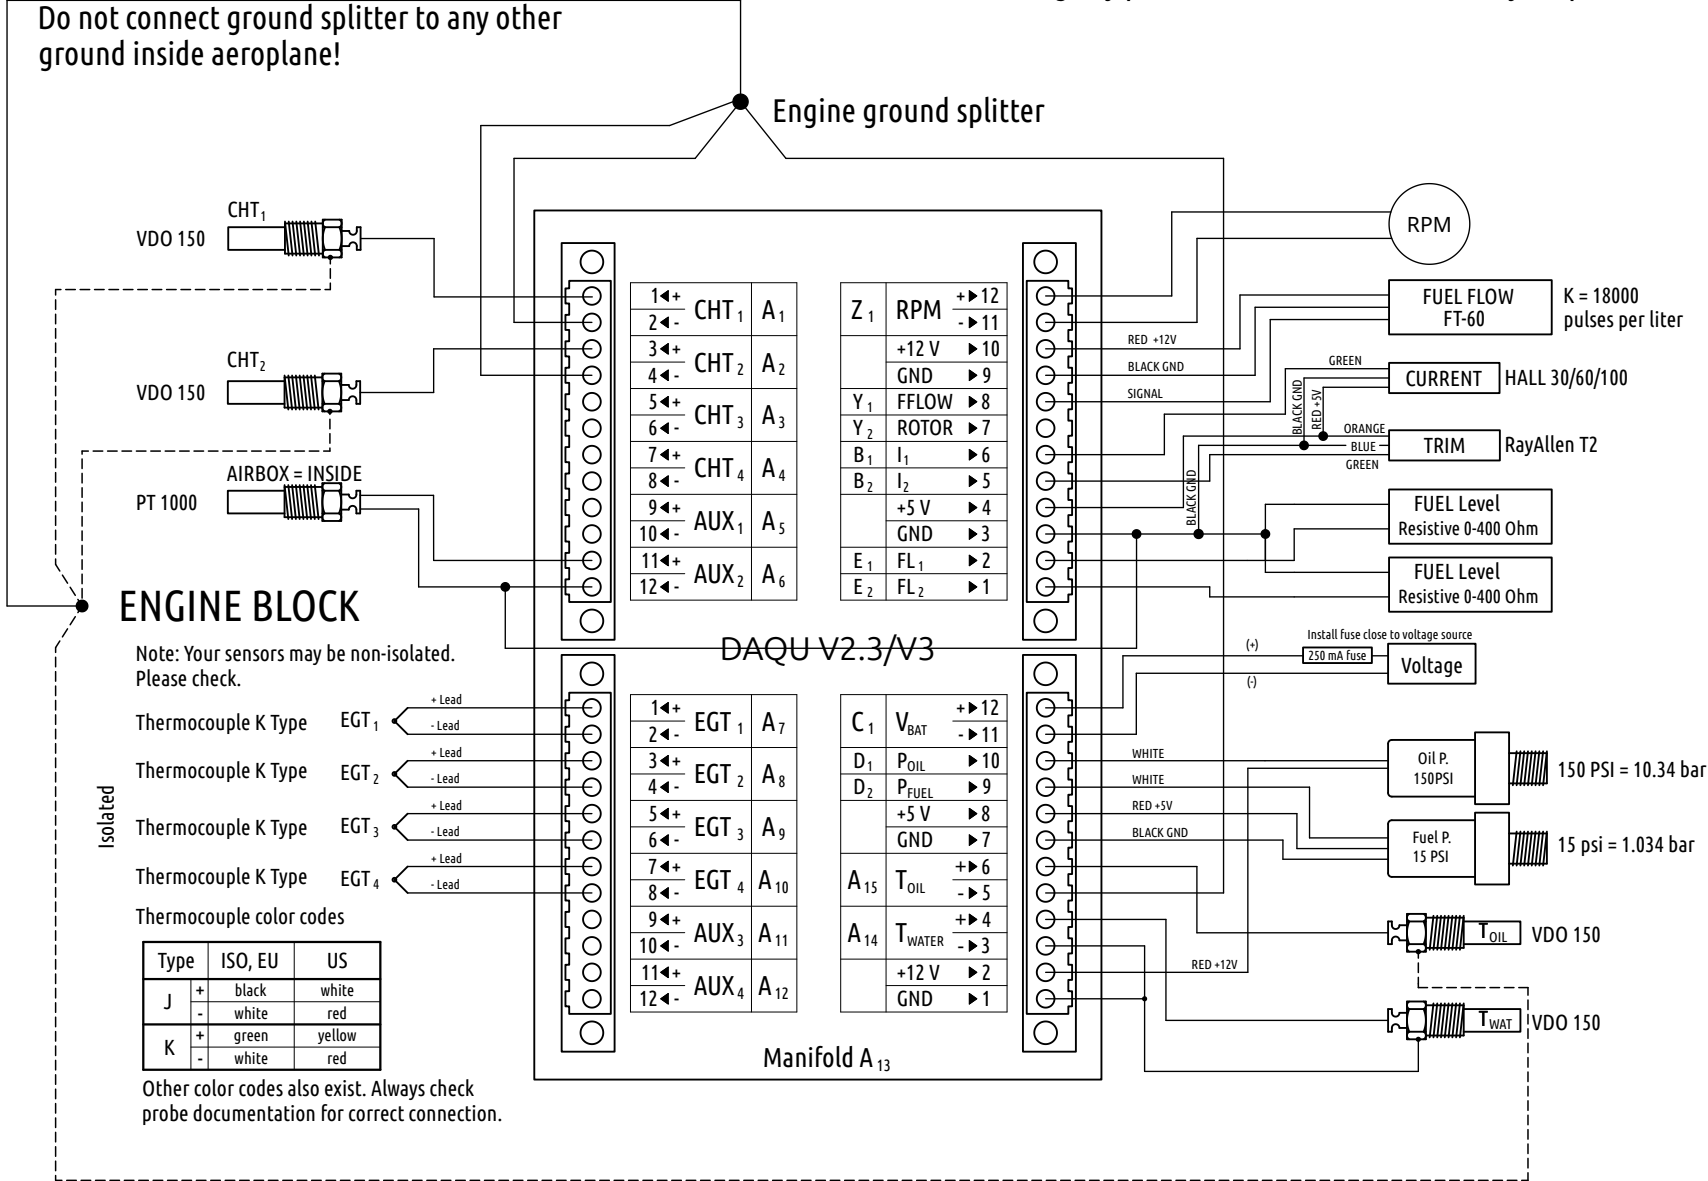

Dashed lines represents connections provided by the engine block.

Kanardia d.o.o.
Lopata 24 a
SI-3000 Celje, Slovenia

Date: August 2024
Scale: N-A

Title: Generic schematics for Rotax 912
Revision: 1
Product: Daqu V2.3/V3